
Archie TV Unit

For the Archie TV Unit 200cm and 220cm

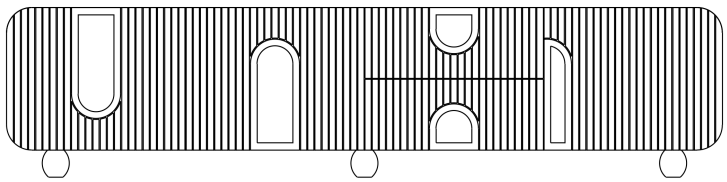

IN THE BOX

1	TV unit body	x 1
2	Round ball legs	x 5

The 5 legs are packed inside the TV unit. They screw in by hand.

BEFORE YOU START


- Read all the steps before you begin.
- This is a heavy piece. Assemble and move it with a minimum of 2 people.
- Work on a soft, clean surface such as carpet or a blanket, so the fluted front and top stay free of scratches.
- Open the doors and drawers and take out the 5 legs packed inside the TV unit.
- Remove all packaging from the body and legs.

1 Turn it upside down

With a minimum of 2 people, turn the body (1) upside down and lay it on the soft, clean surface.

2 Screw in the legs

Screw each round ball leg (2) into a fitting on the base, turning it clockwise until it is firm. Fit all 5 legs. Do not overtighten.

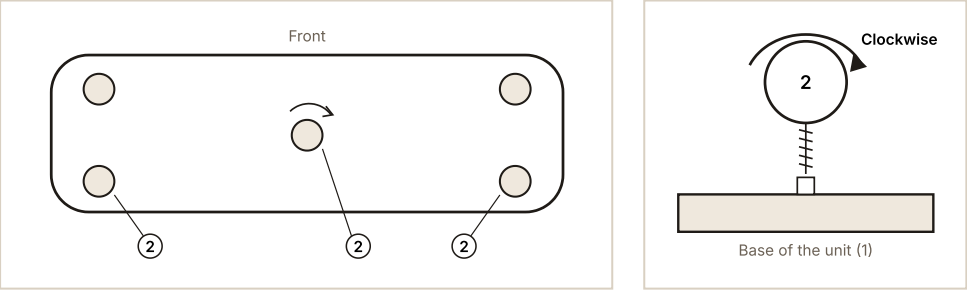

Step 2: with the body (1) upside down, screw a leg (2) into each corner and one into the centre, turning clockwise.

3 Turn it upright

With a minimum of 2 people, turn the TV unit upright. Lift it by the body, not by the legs.

4 Secure it to the wall

Fix it to the wall with an anchor device suited to your wall, especially in homes with children. An anti-tip kit is not included.

CARE

- Wipe clean with a soft, dry or slightly damp cloth.
- Do not use harsh chemicals or abrasive cleaners.
- Keep away from direct sunlight, heat sources and moisture.
- Indoor use only.

NEED HELP?

If anything is missing or you have a question, call or email us.

1300 794 907
sales@duracraftsfurniture.com
duracraftsfurniture.com