

BYRON DINING TABLE - ASSEMBLY INSTRUCTIONS


Table Top 1 pc.

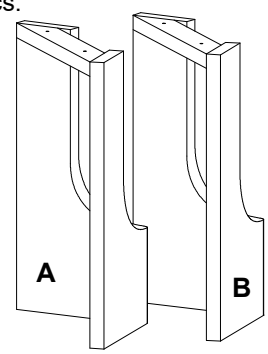


Legs 2 pcs.

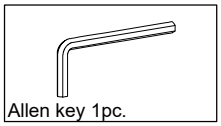



Allen key 1pc.

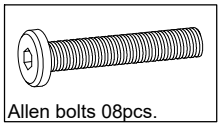
Allen bolts 08pcs.

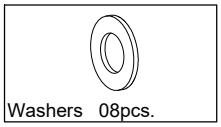

Washers 08pcs.



(Fig. 1.)

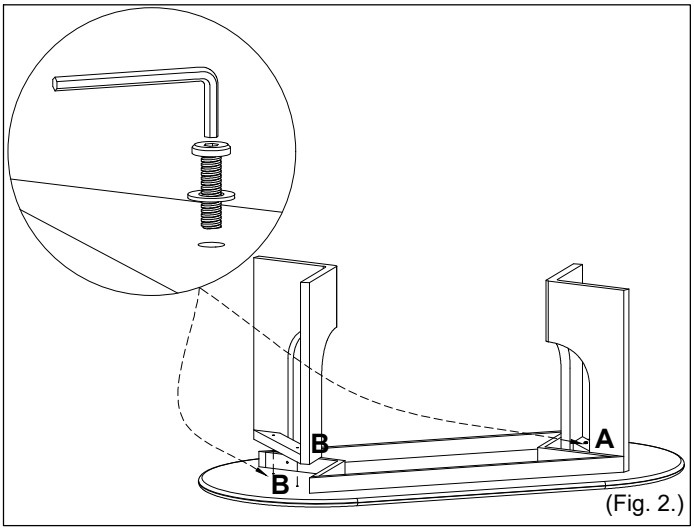

(Fig. 2.)

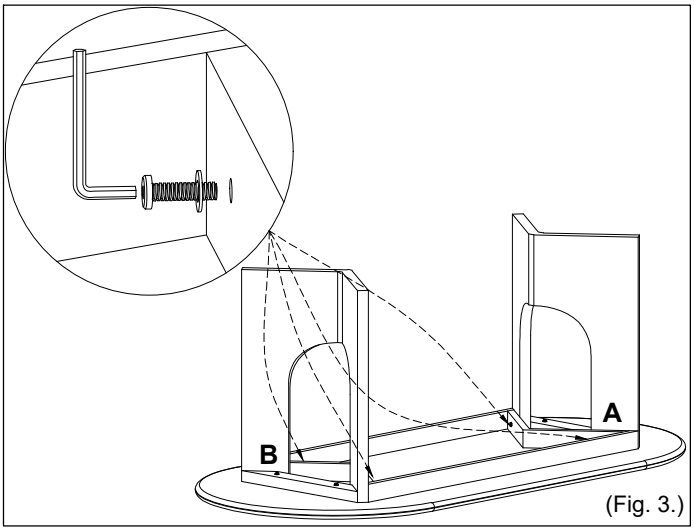

(Fig. 3.)

Pre-assembly:

- *Please read all instructions carefully before beginning assembling.*
- *It is recommended that assembly is done on a soft surface such as carpet to avoid any damage.*
- *We recommend adult assembly by two people for your safety.*


Step 1 : Turn dining table top upside down onto a clean surface as shown in (Fig.1.)

Step 2 : Match legs label on dining table top with the label ("A" with "A" and "B" with "B")Put the washer on to a allen bolt and Insert into the leg, half tighten with the provided Allen key as shown in (Fig.2.)

Step 3 : Put the washer on to a allen bolt and Insert into the side frame, half tighten with the provided Allen key as shown in (Fig. 3).

Step 4 : Repeat the same for remaining leg and tighten all allen bolts and nuts to fasten securely.

Step 5 : Turn the dining table in upright position after assembly as shown in (Fig. 4.)

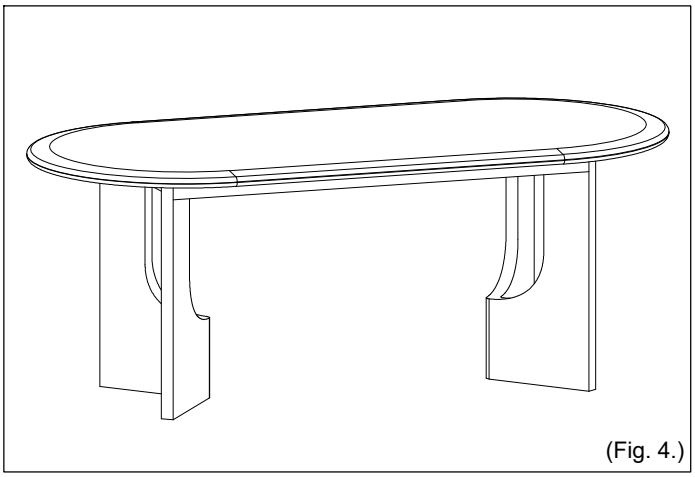
(Fig. 4.)

Care Information:

- Clean using a soft, dry cloth.
- Do not use harsh abrasives, chemicals or polishes containing silicone to as they can damage this finish.
- Avoid direct sunlight as this will cause the timber to change colour. • It is important to remove moist substances immediately